


DIGITAL TIMER INSTRUCTIONS (T4, T7)

1. CONNECT BATTERY

Open lid and attach battery to the snap, and then insert battery in the holder.

2. SETTING THE TIME


- The blue buttons on the side adjust the time up and down left of the colon. To program the digits right-of the colon, (usually seconds) hold down the green “stop/start” button then adjust the blue buttons.
- Model T7 will have buttons on the circuit board inside instead of the blue buttons.

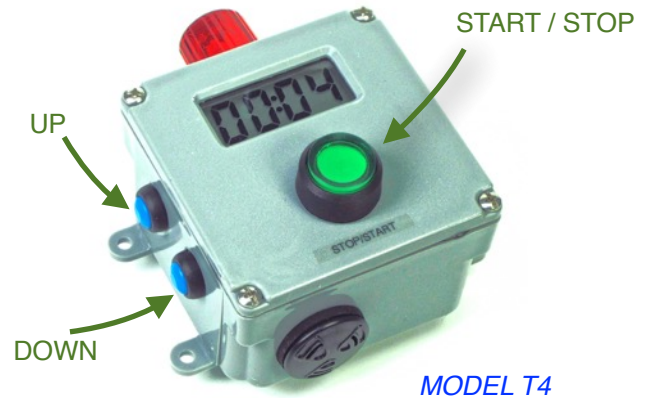

3. SELECTING PROGRAM

- Different modes are selected by removing the circuit board jumpers from the pins.
- JUMPER “A” on the pins selects minutes /seconds. For minutes/hours instead, remove jumper “A”.
- The other jumpers provide the logic according the this table.
- See detailed “mode chart” for further explanation on the behaviors.

MODE	JUMPER			DESCRIPTION
	B	C	D	
1	ON	ON	ON	MANUAL CYCLE STOP - CAN CANCEL * †
2	OFF	ON	ON	MANUAL CYCLE STOP - CAN NOT CANCEL
3	ON	OFF	ON	MECHANICAL TRIGGER
4	OFF	OFF	ON	PAUSING †
5	ON	ON	OFF	AUTOMATIC CYCLE STOP - CAN CANCEL *
6	OFF	ON	OFF	AUTOMATIC CYCLE STOP - CAN NOT CANCEL.
7	ON	OFF	OFF	GUARD DUTY
8	OFF	OFF	OFF	EARLY WARNING

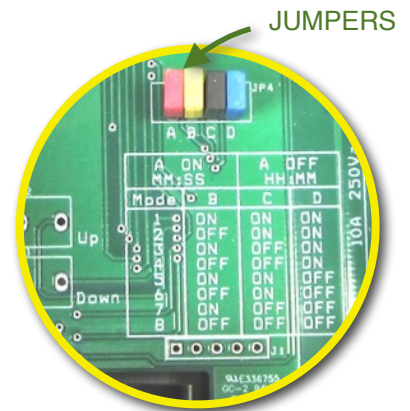

- * Some cycles allow cancellation. Hold stop button 2 seconds.
- † Count up from zero available.

4. OTHER NOTES

- Settings will be kept in memory when power turned off.
- For battery powered units, the alarm volume will diminish when voltage is low.
- This applies to firmware revision 41_54_01X.
- For detailed description of the modes with charts, please go to our website.
- Pressing both blue buttons resets display to zero time.
- Holding down blue buttons advances the time quickly.

Dec 14, 2016