

# TANK ALARM - POLYPROPYLENE

## 1. POWER

Open the cover and snap the battery into the battery clip.  
For units powered by line power, adapter, connect to power.

## 2. MOUNT AND ADJUST DEPTH

- Mount the tank alarm on your tank, then adjust the working depth by loosening the compression tank mount, and sliding alarm to desired depth.

## 3. BATTERY

The circuit board in each unit detects when the battery level is low. When battery voltage is low, the unit will beep for 5 seconds at 30 second intervals.

The circuit board also offers different behaviors that can be selected with the jumper pins. The default behavior is to alarm when there is a level event. Pressing the silence button will silence the alarm for 30 minutes and after that, the buzzer will sound again until the level is corrected. For more behaviors see instruction sheet "SILENCE BUTTON"

## 4. OTHER POINTS

The float can be accessed for cleaning or inspection by unscrewing the float guard.



FLOAT GUARD REMOVED



Dec 20, 2017