

DIGITAL TIMER INSTRUCTIONS (T9)

1. CONNECT POWER

2. SETTING THE TIME


- The blue buttons on the side adjust the time up and down left of the colon.
- To program the digits right-of the colon, (usually seconds) hold down the green “stop/start” button then adjust the blue buttons.

3. SELECTING PROGRAM

- JUMPER “A” on the pins selects minutes /seconds. For minutes/hours instead, remove jumper “A”.
- Jumpers B,C,D, will be programmed from the factory so there should be no need to adjust them. They change the logic according the this table. See detailed “mode chart” for further explanation on the behaviors.



MODE	JUMPER			DESCRIPTION
	B	C	D	
1	ON	ON	ON	MANUAL CYCLE STOP - CAN CANCEL * †
2	OFF	ON	ON	MANUAL CYCLE STOP - CAN NOT CANCEL
3	ON	OFF	ON	MECHANICAL TRIGGER
4	OFF	OFF	ON	PAUSING †
5	ON	ON	OFF	AUTOMATIC CYCLE STOP - CAN CANCEL *
6	OFF	ON	OFF	EALRY WARNING ONLED2
7	ON	OFF	OFF	GUARD DUTY
8	OFF	OFF	OFF	EARLY WARNING ON LED1

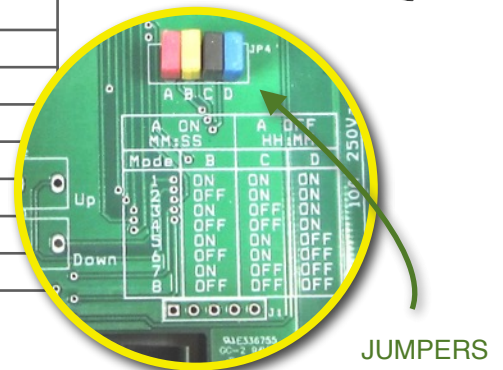

* Cycle allows cancellation. Hold stop button 2 seconds.
 † Count up from zero available.

4. OTHER NOTES

- T9-2 has two lights. one for actively counting, the other finals cycle end.
- T9-3 has three lights: actively counting, early warning, cycle end. Early warning is set by holding all 3 buttons for 5 seconds. When display flashes, release buttons and set the desired early warning time. Wait 5 seconds for display to reset. Set cycle time.
- Settings will be kept in memory when power turned off.
- For detailed description of the modes with charts, please go to our website.
- Pressing both blue buttons resets display to zero time.
- Holding down blue buttons advances the time quickly.

FIRMWARE V. 41_55_01X

Sep 28, 2017