


RE-PROGRAMMING THE RECEIVER

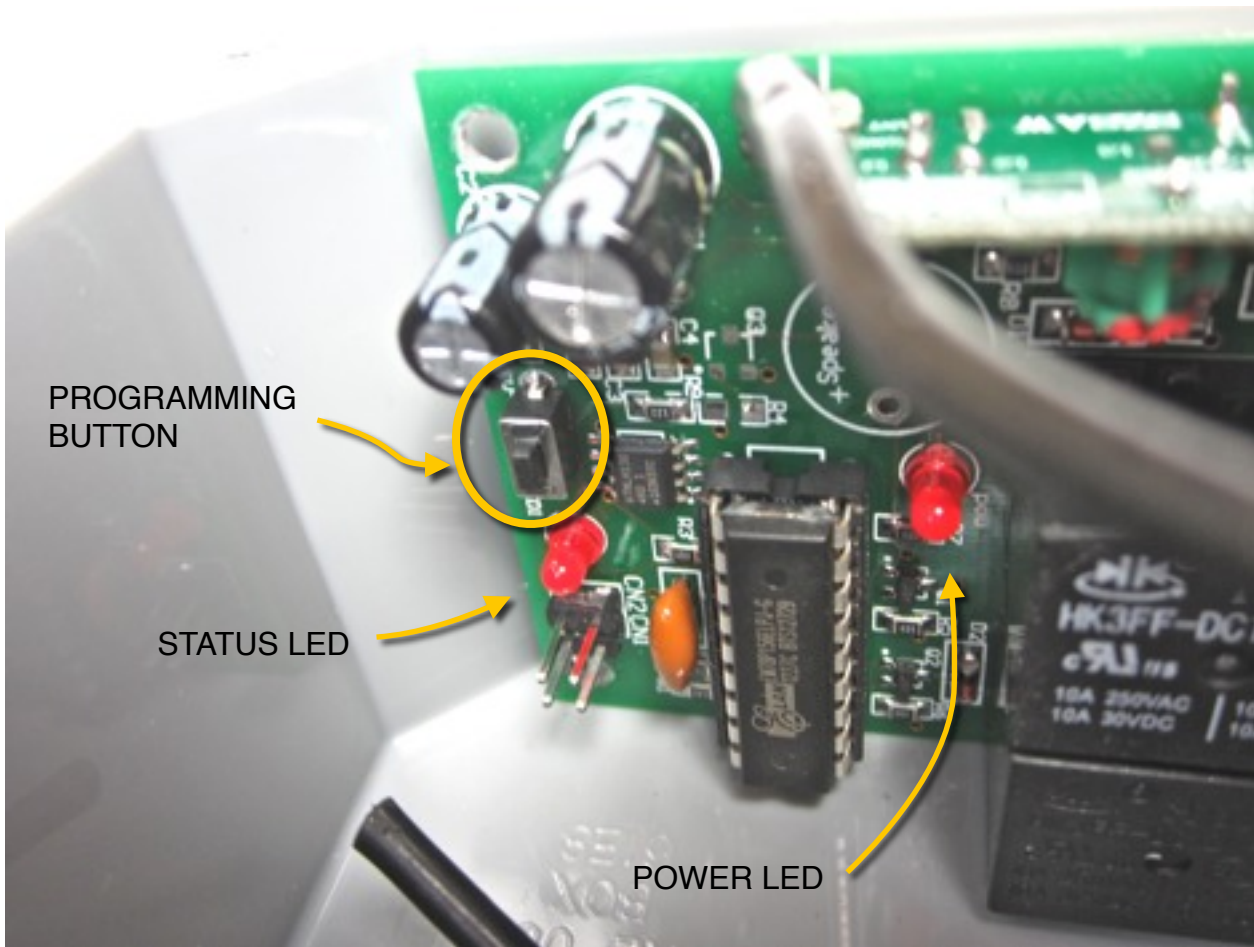

1. Power up the wireless pcb by plugging it in.
2. Press the programming button for 3 seconds, until the status LED blinks. (indicating it is cleared of all codes)
3. Press the programming button a second time for about two seconds so it stays on continuously. (indicating it is ready to accept a new code)
4. Provide the wireless signal you wish the receiver pcb to respond to. (push the test button on a level alarm for example)